


ZU4 Pump Oil Reservoir Cap Replacement Procedure

When transporting pumps the reservoir has a RED transport cap installed on it.

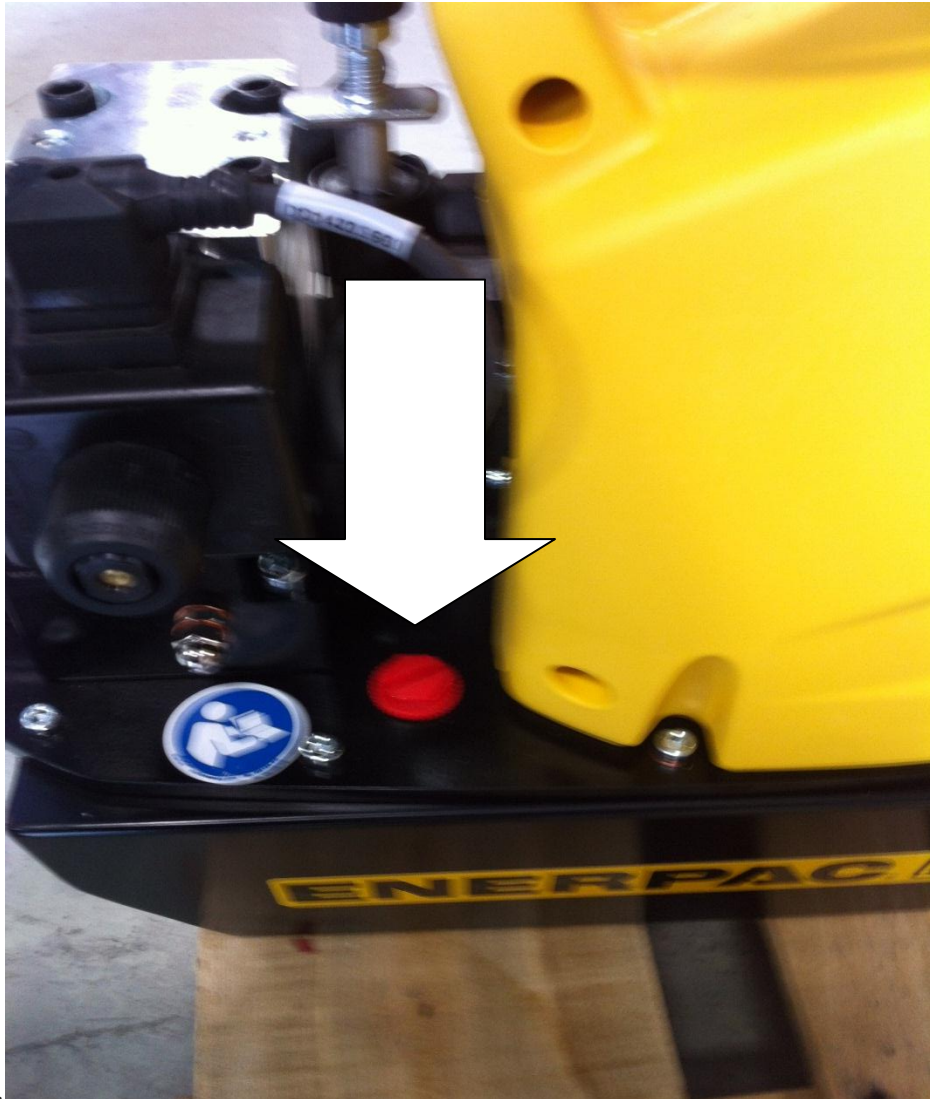

This cap is required when shipping the pump to insure oil does not spill from the reservoir during transport.

After delivery the vented cap that comes in the bag with the instruction manual must be installed on reservoir to relieve any pressure build up in the reservoir.



If you have any questions with regards to the procedure.
Please contact Torkworx at 888-502-WORX.